

The experience of the Qualistar, *ensuring high performance*

QUALISTAR+

**POWER AND
ENERGY QUALITY
ANALYSERS**



IEC 61010

**1000 V CAT III
600 V CAT IV**

Measure all the necessary voltage, current and power parameters for full diagnosis of an electrical installation.

Capture and record all the parameters, transients, alarms and wave forms simultaneously.

Proven simplicity of use.

- 5 voltage inputs & 4 current inputs
- 10-minute Inrush mode
- Calculation of distorting power
- IP67: all-terrain model available




C.A 8335 & C.A 8435

Designed for inspection and maintenance teams in industrial or administrative buildings, the Qualistar can provide a snapshot of the main electrical network quality characteristics.

Easy to handle and precise, these instruments also offer a large number of calculated values and several processing functions.



Functions

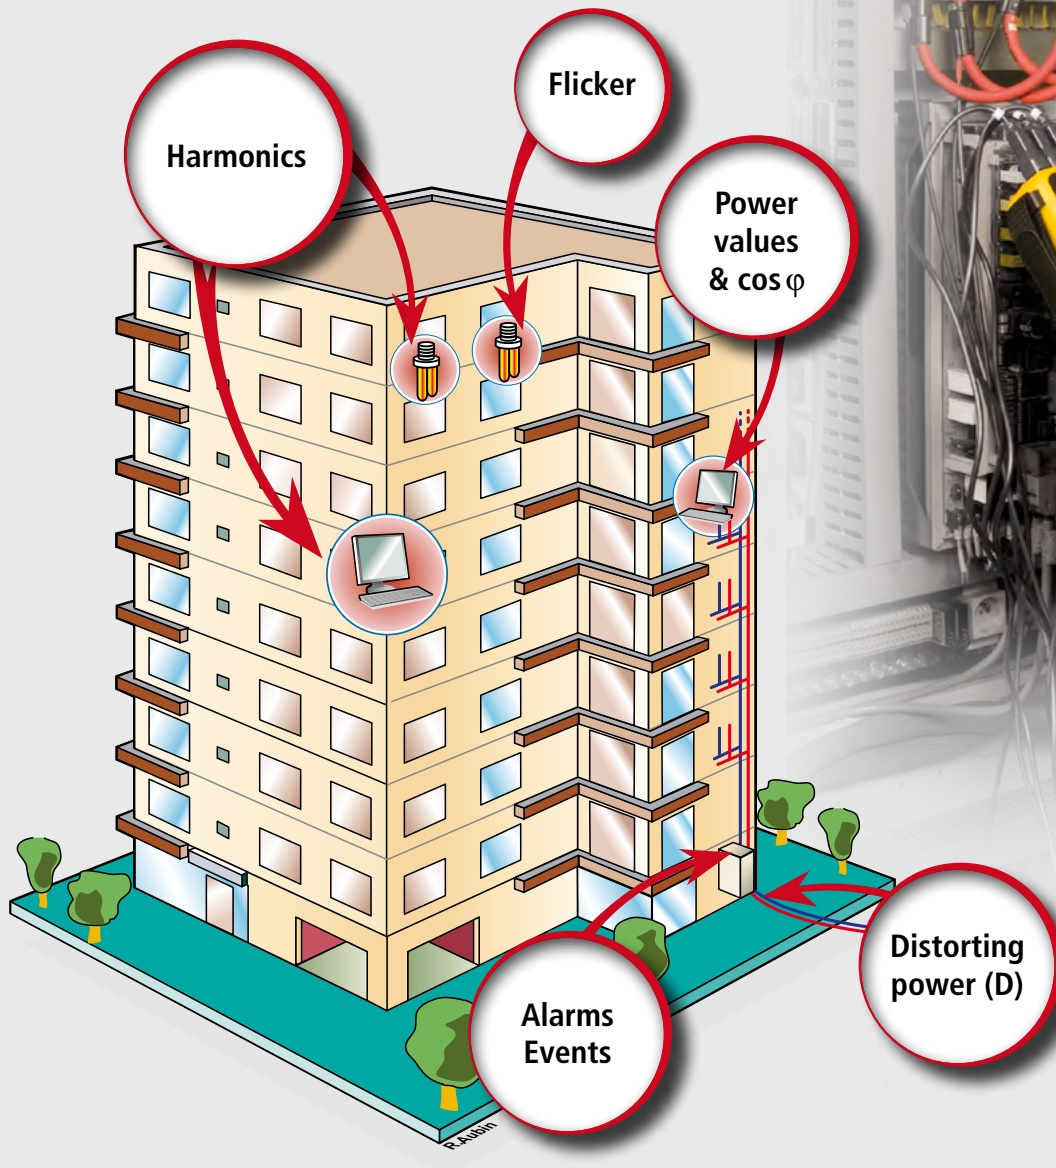


- ▶ Real-time display of wave forms (4 voltages and 4 currents)
- ▶ Half-period RMS measurements of voltages and currents
- ▶ Intuitive use
- ▶ Automatic recognition of the different types of current sensors
- ▶ Measurement on any type of installation: three-phase, Aron, etc.
- ▶ Integration of all the DC components
- ▶ Measurement, calculation and display of harmonics up to the 50th order,
- ▶ Display of phasor diagram
- ▶ Measurement of P, Q, S and D power values (total and per phase)
- ▶ Energy measurement (total and per phase)
- ▶ Calculation of the K Factor & FHL
- ▶ Calculation of distorting voltages and currents
- ▶ Calculation of the $\cos \phi$ displacement power factor (DPF) and the power factor (PF)
- ▶ Inrush over up to 10 minutes
- ▶ Capture of hundreds of transients lasting several tens of μ s
- ▶ Calculation of Pst & Plt flicker values
- ▶ Unbalance calculation (current and voltage)
- ▶ Monitoring of the electrical network with setting of alarms
- ▶ Back-up and recording of screenshots (image and data)
- ▶ Recording and export on PC
- ▶ Software for data recovery and real-time communication with a PC

Functions

Connections


The Qualistar models are ideal for applications on all types of electrical networks, from the simplest to the most complex:

- Single-phase, split-phase and three-phase with or without neutral
- All types of 2, 3, 4 and 5-wire electrical networks
- 2-wattmeters method
- ARON
- 2 ½ elements...

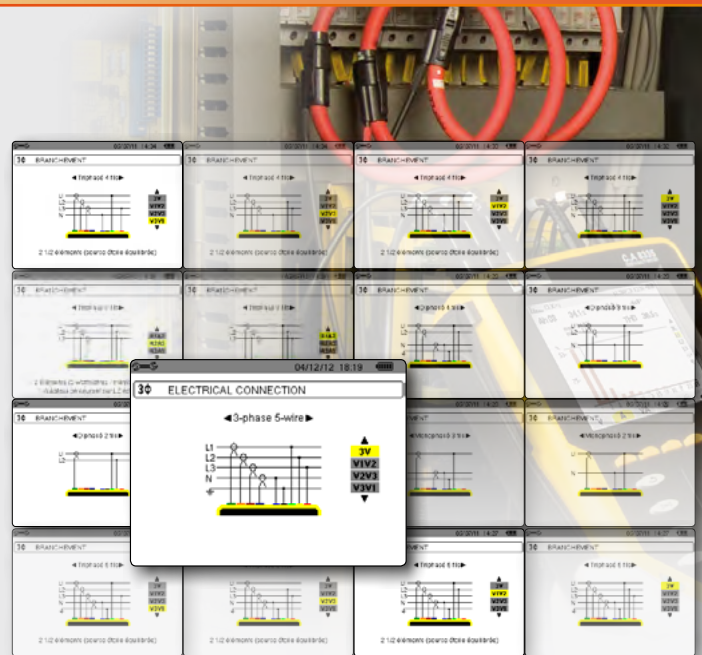

Longer Inrush... over 10 minutes!

The Inrush current corresponds to the maximum input current drawn by an electrical device when it is powered up. This measurement helps to size the electrical installation correctly.

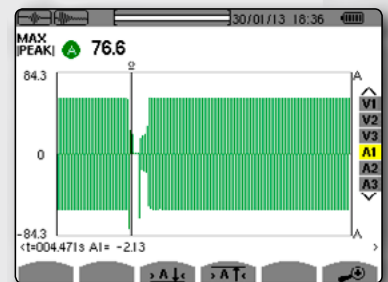

The Inrush is measured over a period of 10 minutes. Once you have chosen the acquisition mode (RMS or peak), the Qualistar captures everything.



Short or long-term flicker

The flicker (as defined by the IEC/EN standard) characterizes voltage variations which cause lighting fluctuations, for example.

According to the applicable standards, the Flicker level is expressed by two parameters:

- **Pst (short-term flicker)**
Calculation of the Pst, which is used to assess the flicker level, is based on statistical processing of the voltage signal sampled. It is measured over a period of 10 minutes
- **Plt (long-term flicker)**
This is a multiple of the Pst. It is measured over a period of 2 hours.

Power and energy quality analysers


Energy values, including Tonnes Oil Equivalent

The Qualistar models measure energy. This mode displays all the values relating to power and energy.



- "Start" and "Stop" keys to activate and deactivate summing of the energy values.
- A new feature is the wide variety of units available: kW, Joule, nuclear toe, non-nuclear toe, BTU, etc

Calculation of K factor for transformers

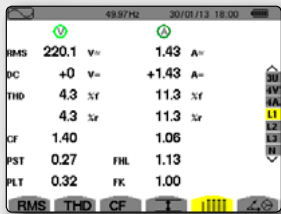



The harmonic currents flowing in a network lead to increased losses in the windings. This results in heating of the transformer and reduces the life span of the instruments connected.



- compliance with the NF EN 50464-3 standard for calculating transformer derating.
- the FHL and European K factor parameters are recorded and measured simultaneously.


Harmonics

All the useful parameters are measured: global THD and per phase on U, I, V and VA, phase offset of harmonics. The C.A 8334B & Qualistar+ are equipped with the harmonics function on VA and the "expert mode".

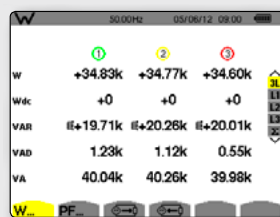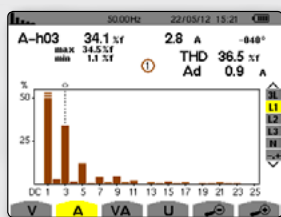

New: the harmonics measurement function is more comprehensive:

- calculation of the harmonics in %f and %r
- decomposition of the harmonics on the neutral conductor
- calculation of the distorting voltages and currents

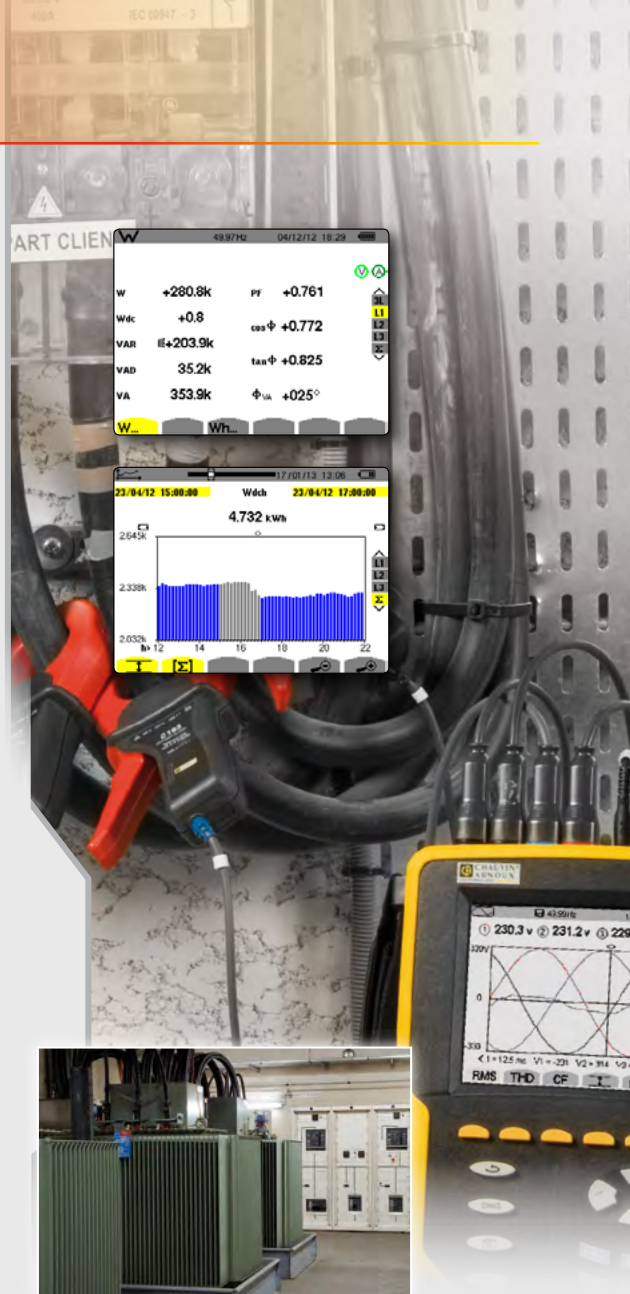

Distorting power

New!


Breakdown of the reactive power values, with the concept of non-active power (N), distorting power (D) and reactive power (Q).

- Breakdown of the reactive power to find the distorting power linked to the harmonics (VAD).
- Distorting power for sizing the harmonic filters.
- Reactive power (var) of the fundamental for sizing the battery of the power-correction capacitor.


Configuration

- ▶ Users enter the instrument's general parameters directly (date and time, display contrast, colour, etc.).
- ▶ The menus, help screens and pop-ups are translated into all the languages.
- ▶ They select the type of network to which the Qualistar is connected.
- ▶ They configure the measurement and recording parameters.

Display

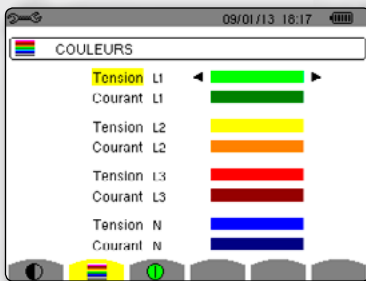


Languages

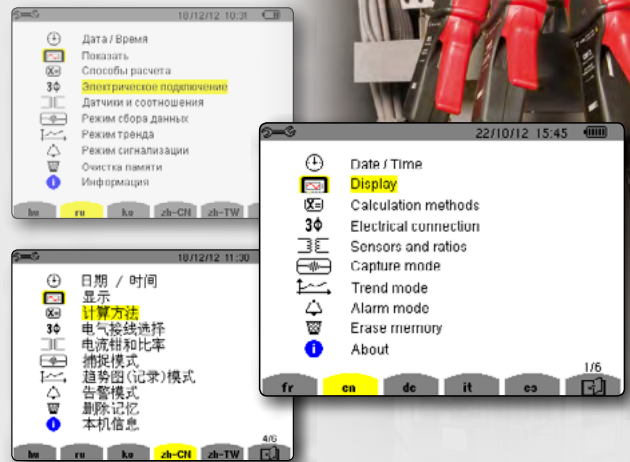

Ratios and sensors

When they are connected, the current sensors are recognized automatically by the Qualistar.

By configuring the ratios, it is possible to obtain **direct readings of the measurements** on the transformer primary.

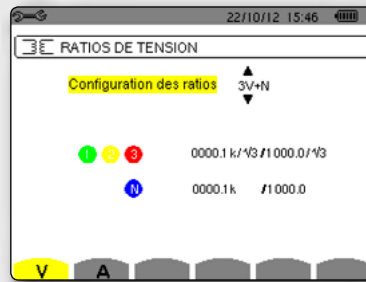

Practical advantages



Accessible on the front panel of the Qualistar, screenshots can be produced simply by pressing a key. The Help function is available at every stage.

? Help

If you have any hesitations, the **Help** key clearly explains the functions applicable to the screen display.

📷 Screenshot

When this key is pressed, the instrument takes a screenshot. The screen displayed is then saved automatically with time/date-stamping.

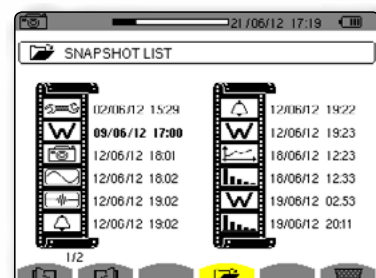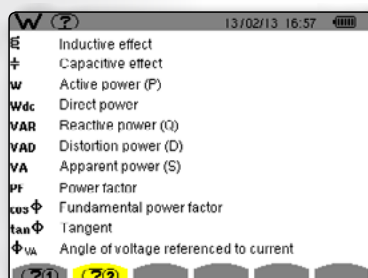

Display

View the characteristics of a network instantaneously



OBSERVATION



Graphics

The Qualistar models allow you to view all the inputs simultaneously. The measurements are displayed as waveforms; values or Fresnel diagrams.

View all the channels simultaneously!

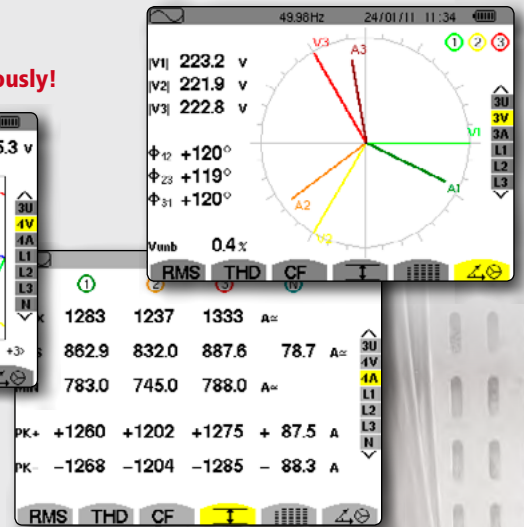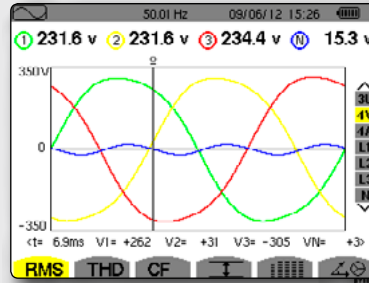


DIAGNOSTICS





Harmonics mode

Global THD and per phase on U, I, V and VA in % and RMS value, phase offset of harmonics. Only the C.A 8334 & C.A 8335 offer the expert mode for the Harmonics function. These two instruments can be used to analyse the influence of the harmonics on heating of the neutral or on rotating machines.

THD PHASE BY PHASE

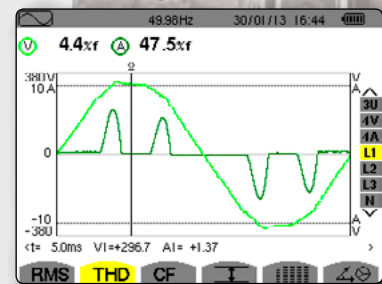


GLOBAL THD

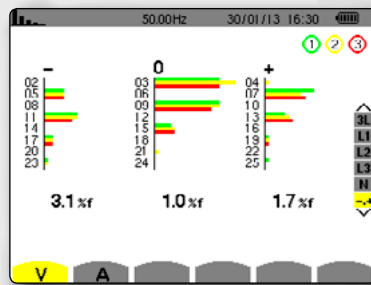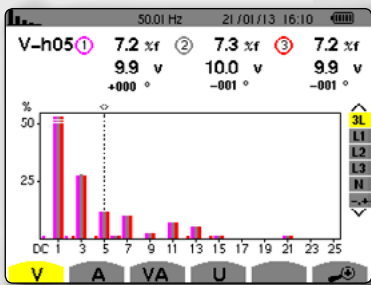


Power/Energy mode

This mode displays all the values concerning power and energy. The "start" and "stop" keys can be used to activate and deactivate totalizing of the energies.

POWER MEASUREMENT

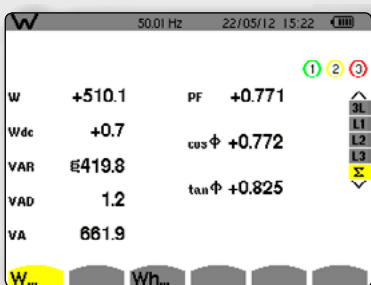

INTEGRATION OF POWER / ENERGY OVER A PERIOD OF TIME

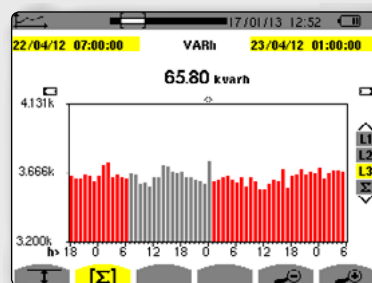

Monitor everything,

Configuration





Recording mode

- More than 450 recordable values with all the required parameters and graphic display.
- Programmable recording period and storage rate.



New! Quick start-up:

- **Immediate start of recording**
- Automatic indication of Min/Max values
- Auto-completion of measurement campaign names

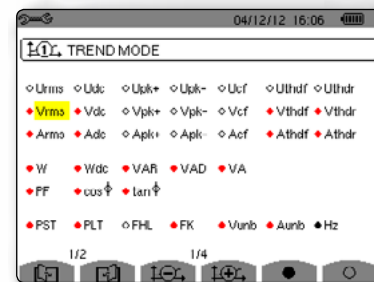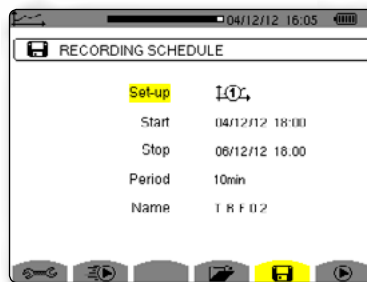



Alarms mode

- **Up to 40 alarms can be set simultaneously!**
- Threshold overruns to be monitored can be configured during set-up.
- For each alarm threshold overrun, a time/date-stamped recording of the event is made with the duration and the extreme values.
- Possibility of modifying the end dates for programmed alarms.

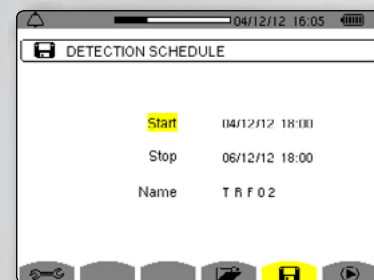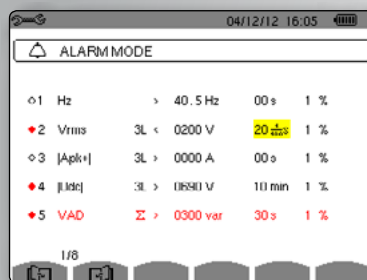


Transients mode

- Capture of events on the voltage and current with triggering according to thresholds.
- **Capture of hundreds of transients.**
- Display of events as short as a few tens of μs.

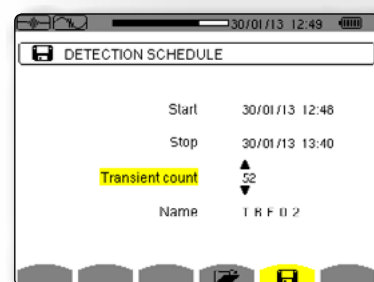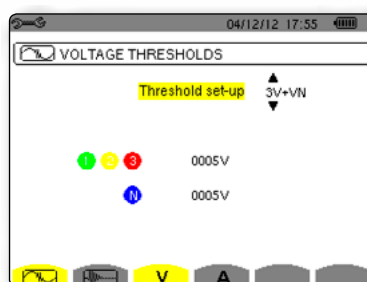

Inrush

- Monitoring of the Inrush current for a load when it is powered up.
- **Records the currents, voltages and frequency.**
- For correct sizing of electrical installations.
- To view source switching faults.

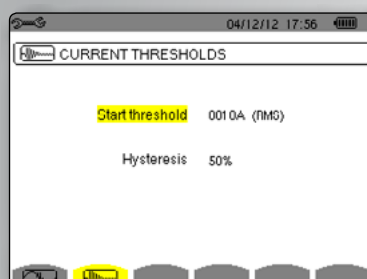

with more parameters

Acquisition in progress


Analysis



During acquisition:

- ▶ Operation of several modes in parallel,
- ▶ Possibility of viewing the data during a campaign.

Users can view all the parameters, so they can be checked at any time.

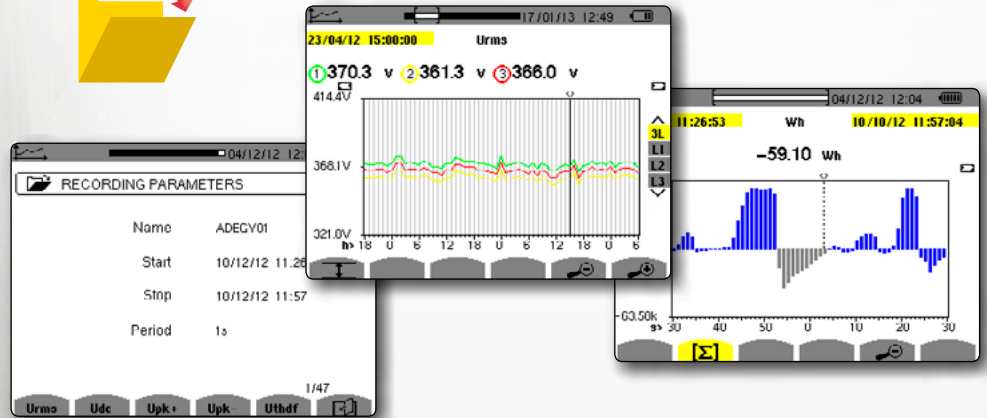

DETECTION LIST




TRY01	20/04/12 15:43	> 03/05/12 09:53
11R-02	04/12/12 18:00	> 06/12/12 18:00
ADEG	13/01/13 13:26	> 13/01/13 14:11

ALARM LIST

04/12/12 16:43	L1	Vlhd	23.1%	2s
16:49	L2	Urms	0V	2s
16:30	L3	Urms	215V	36min
18:30	L2	Urms	0V	43s
18:43	L3	Urms	216V	5s
18:50	L1	Arms	1A	1s
18:50	L3	Urms	218V	2d13h
05/04/12 05:49	L2	Urms	21.3V	12h5min

TRANSIENT LIST

TRY01	053	20/04/12 15:46:47	.507	V2
	054	20/04/12 15:46:51	1.58	V2
	055	20/04/12 15:46:51	.681	V2
	056	20/04/12 15:46:52	.689	V2
	057	20/04/12 15:47:00	1.53	V2
	058	20/04/12 15:47:07	.126	V2
	059	20/04/12 15:47:14	.210	V2
	060	20/04/12 15:47:16	.981	V1

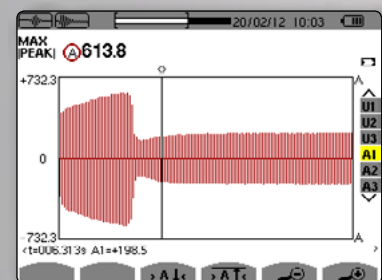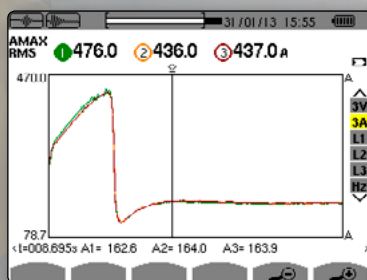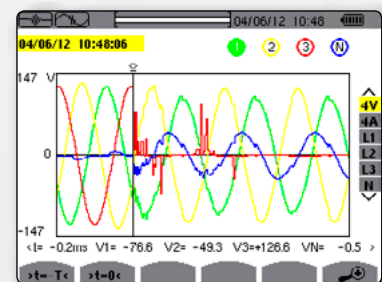

NEW

Special all-terrain C.A 8435

A rugged, waterproof C.A 8435,
the special Qualistar+ for all conditions and all seasons!

- Indoor and outdoor use, including in the rain
- 5 voltage inputs, 4 current inputs
- Continuous, simultaneous recording of all the parameters
- Monitoring with alarms
- All installation types

**IP
67**



Specific caps have been developed to ensure maximum waterproofing for the C.A 8435 analyser.

The rugged site case is ideal for industrial use in factories, production workshops, etc. It is so rugged that it can even withstand projections of solids or liquids.



Specific accessories for this model: mains lead, sets of voltage leads and Amp**FLEX**™ clamps.

Essailec accessory for all the Qualistar models

A cable with an ESSAILEC plug can be used for testing without disturbances or interruptions in the power supply circuit on meters and the protective relays installed in the secondary circuits of the current or voltage transformers.

The main advantage is quick and simple measurement with maximum user safety



Accessories and software


ACCESSORIES

Model	MN93	MN 93A	MA193	PAC93	A193-450	A193-800	C193	E3N
Measurement range	2 to 240 Aac	0.005 Aac to 5 Aac 0.1 Aac to 120 Aac	30 A to 6,500 Aac	10 A to 1,000 Aac 10 A to 1,400 Aac	30 A to 6,500 Aac	30 A to 6,500 Aac	3 A to 1,200 Aac	50 mA to 10 Aac/dc 100 mA to 100 Aac/dc
Clamping Ø / length	20 mm	20 mm	70 mm / 220 mm	1 x Ø 39 mm 2 x Ø 25 mm	140 mm Ø 450 mm	250 mm Ø 800 mm	52 mm	11.8 mm
IEC 61010	600 V CAT III / 300 V CAT IV	600 V CAT III / 300 V CAT IV	1,000 V CAT III / 600 V CAT IV	600 V CAT III / 300 V CAT IV	1,000 V CAT III / 600 V CAT IV	1,000 V CAT III / 600 V CAT IV	600 V CAT IV	600 V CAT III / 300 V CAT IV



SOFTWARE

The measurements made with the Qualistar can be processed using two software products; **Power Analyzer Transfer** delivered as standard and **DataView** available as an option.

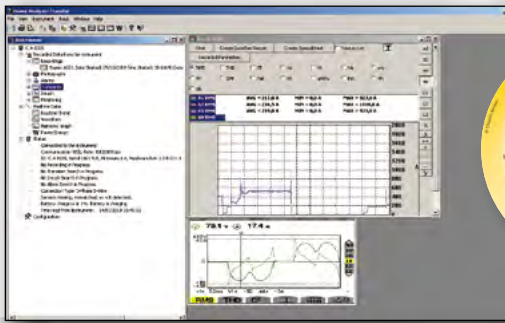

Power Analyzer Transfer

- Configuration of the instrument: setup, recording, alarms
- Processing of the recorded data and the alarms
- Transfer of screenshots and transients
- Data export into Excel spreadsheets
- Data export in graphic form in Windows™



DataView



The simple-to-use **DataView** software automatically recognizes the instrument connected to the PC and opens the corresponding menu. Users have direct access to:

- report management
- database management

DataView is compatible with other Chauvin Arnoux® products:

- Qualistar & Qualistar+ power analysers
- C.A 8220 & C.A 8230 power analysers
- F400 and F600 multimeter clamps
- And other measuring instruments

Minimum operating system requirements:
Windows® 2000, Windows® XP, Windows® Vista, Windows® 7 and 8.

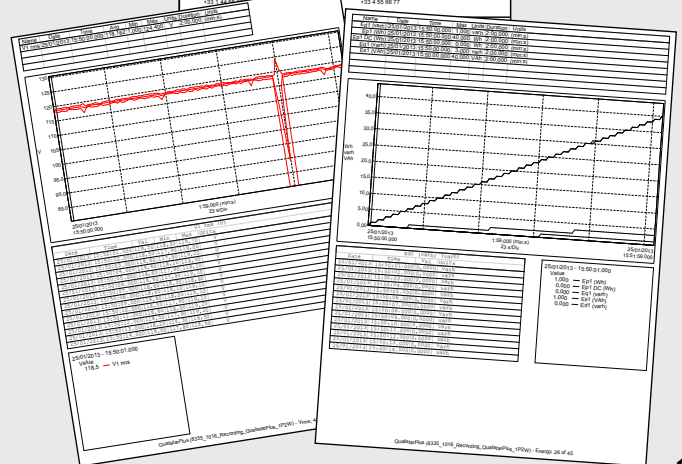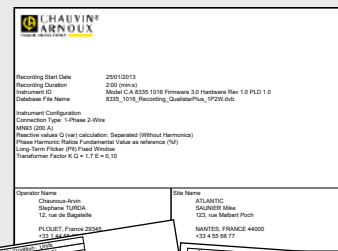

Technical specifications

	C.A 8332B	C.A 8334B	C.A 8335	C.A 8435
Number of channels	3U / 4I		4U / 4I	
Number of inputs	4V / 3I		5V / 4I	
Voltage (TRMS AC+DC)	Phase-Phase 6 V to 960 V		5 V to 1,000 V	
	Phase-Neutral 6 V to 480 V		5 V to 1,000 V	
	Voltage ratio		up to 500 kV	
Current (TRMS AC+DC)	MN93: 2 to 240 A _{AC} ; MN93A: 0.005 A _{AC} to 5 A _{AC} / 0.1 A _{AC} to 120 A _{AC}			
	MN clamps		3 A to 1,200 A _{AC}	
	C193 clamp		30 A to 6,500 A _{AC}	
	AmpFLEX™ or MA clamps		10 A to 1,000 A _{AC} / 10 A to 1,400 A _{DC}	
	PAC93 clamp		50 mA to 10 A _{AC/DC} – 100 mA to 100 A _{AC/DC}	
	E3N clamp		10 mA to 60 kA	
	Current ratio			
Frequency	40 Hz to 69 Hz			
Power values	W, VA, var, VAD, PF, DPF, cos φ, tan φ			
Energy values	Wh, varh, VAh, VADh			
Harmonics	yes			
	yes, orders 0 to 50, phase			
	THD		yes	
	Expert mode		yes	
Transients	-		50 210	
Flicker (Pst & Plt)	yes			
Inrush mode	-		yes on 4 periods yes > 1 minute	
Unbalance yes	yes			
Recording	Min/Max		yes	
	no		yes	
	of a selection of parameters at the max. sampling rate		1 month	
	of a selection of parameters with acquisition every 10 min		several years	
Alarms	4,000 of 10 different types		10,000 of 40 different types	
Peak	yes			
Vectorial representation	automatic			
Display	Colour ¼ VGA LCD screen, 320 x 240, diagonal 148 mm			
Capture of screens and curves	8		12 50	
Electrical safety	IEC 61010 1,000 V CAT III / 600 V CAT IV			
Languages	6		25+	
Communication interface	Optical RS232 / USB		USB type B	
Battery life	10 hrs or 25 hrs in recorder mode			
Power supply	9.6 V NiMH rechargeable battery or external mains charger			
Dimensions	240 x 180 x 55 mm			270 x 250 x 180 mm
Weight	2.1 kg		1.9 kg 3.7 kg	

STATE AT DELIVERY

C.A 8332B and C.A 8334B:

delivered with bag no. 22, an RS232 optical cable, a mains power lead, 4 x Ø 4 mm banana voltage leads 3 m long, 4 crocodile clips, safety datasheet, operating manual, PC data retrieval software and the set of current sensors chosen.

C.A 8335: delivered with bag no. 22, USB cable, charger power pack, mains power lead, 5 x banana voltage leads 3 m long, 5 crocodile clips, 12-colour identification kit for the leads and inputs, screen-protection film, safety datasheet, multi-language operating manual and PC data retrieval software.

C.A 8435 AMP450: delivered with bag no. 22, USB cable, IP67 mains power cable, 4 AmpFLEX™ 450 IP67 A196 current sensors, 5 x 3 m black IP65 BB196 banana leads, 5 lockable crocodile clips, 12-colour identification kit for the leads and inputs, scratchproof screen-protection film (mounted), safety datasheet, CD containing the multi-language operating manual and CD PC data retrieval software and CD containing PC data retrieval software (Power Analyzer Transfer).

References for ordering

C.A 8335 alone	P01160577
C.A 8332B-F MN93A clamp	P01160522
C.A 8334B-F MN93A clamp	P01160552
C.A 8332B-F AmpFLEX™ 450 mm	P01160523
C.A 8334B-F AmpFLEX™ 450 mm	P01160553
C.A 8332B-INT MN93A clamp	P01160525
C.A 8334B-INT MN93A clamp	P01160555
C.A 8332B-INT AmpFLEX™ 450 mm	P01160526
C.A 8334B-INT AmpFLEX™ 450 mm	P01160556
C.A 8435 alone	P01160585
C.A 8435 AmpFLEX™ 450 mm	P01160587

Other models: please contact us.

*for C.A 8335/C.A 8435, **for C.A 8334B/C.A 8332B

MN93 clamp	P01120425B
MN93A clamp	P01120434B
AmpFLEX™ A193 450 mm clamp	P01120526B
AmpFLEX™ A193 800 mm clamp	P01120531B
PAC93 clamp	P01120079B
C193 clamp	P01120323B
AmpFLEX™ A196 450 mm IP67 clamp	P01120552
MiniFLEX™ MA193, 200 mm	P01120580
E3N clamp*	P01120043A
E3N Adapter*	P01102081
E3N mains power pack*	P01120047
Battery pack	P01296024
ESSAILEC casing	P01102131

Qualistar screen film	P01102059
Set of id. rings/inserts*	P01102080
Set of caps (C.A 8435)	P01102117
Set of 5 x 3 m IP65 (BB196) banana leads	P01295476
Carrying bag no. 21	P01298055
Carrying bag no. 22	P01298056
RS232 optical lead**	P01295190A
USB-A USB-B lead*	P01295293
5 A box	P01101959
Mains power pack (C.A 8335)	P01102057
IP67 mains lead (C.A 8435)	P01295477
Dataview® Software	P01102095
Lockable crocodile clips (set of 5)	P01102099



FRANCE
Chauvin Arnoux
190, rue Championnet
75876 PARIS Cedex 18
Tel: +33 1 44 85 44 38
Fax: +33 1 46 27 95 59
export@chauvin-arnoux.fr
www.chauvin-arnoux.fr

UNITED KINGDOM
Chauvin Arnoux Ltd
Unit 1 Nelson Ct, Flagship Sq, Shaw Cross Business Pk
Dewsbury, West Yorkshire - WF12 7TH
Tel: +44 1924 460 494
Fax: +44 1924 455 328
info@chauvin-arnoux.co.uk
www.chauvin-arnoux.com

MIDDLE EAST
Chauvin Arnoux Middle East
P.O. BOX 60-154
1241 2020 JAL EL DIB - LEBANON
Tel: +961 1 890 425
Fax: +961 1 890 424
camie@chauvin-arnoux.com
www.chauvin-arnoux.com

For assistance and ordering